

FIRMWARE UPDATE FOR EBS RETRACER (MAC & PC)

IMPORTANT! BEFORE YOU DO THIS, DOWNLOAD AND INSTALL THE FIRMWARE UTILITY FROM <http://ebssweden.com/content2/category/retracerhelp/>

1. CONNECT USB

Connect the USB (Mini type B) cable to the host computer.



2. POWER ON



Hold down the ACTIVE footswitch on the Retracer while plugging in the power supply.

The LED should now start blinking awaiting commands from the Firmware update utility.

(PC Only: The host computer may need to install a driver the first time, but no additional drivers are needed for the Human Interface Device driver (HID) to work properly.)



3. START PROGRAM

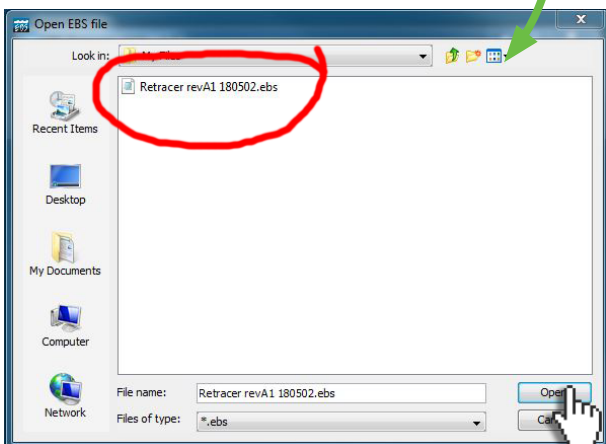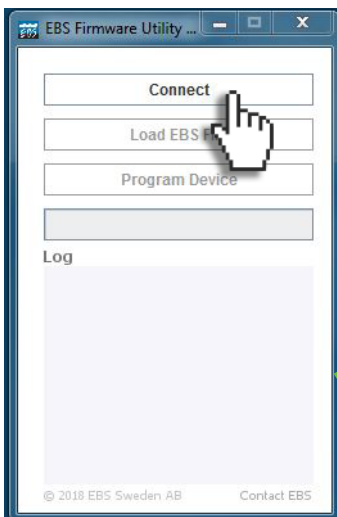

Follow these steps as seen in the pictures, and then you are ready to go!